

50kg 110lbs Force Wall Mount Smokeproof Emergency Door Holder



S4A-31

What is electromagnetic door stopper?

Electromagnetic door holders and releasers keep doors open until they are released by fire-alarm systems, remote smoke detectors, or other switching devices. They provide a high holding force. In the event of a power failure, they release the door to a closed position to keep the facility secure.

How do you remove a magnetic door stopper?


Removing the Old Magnetic Door Stop Use a screwdriver to loosen the screws until they come off. Remove the entire catch assembly and put them aside.

Next, work on the magnetic door stop installed on the wall trim. Remove the screws, pull off the device, and set it aside.

Specifications

Lock body size:	80X80X38 (mm)	Input voltage:	DC12v/DV24Vffl10% (adjustable)
Adsorption cake size:	60X60X45 (mm)	Working current:	DC120/170mAffl5%
Standard suction:	60KG (120LBS) ffl 10% linear tension		DC24V/85mAffl5%

Installation renderings

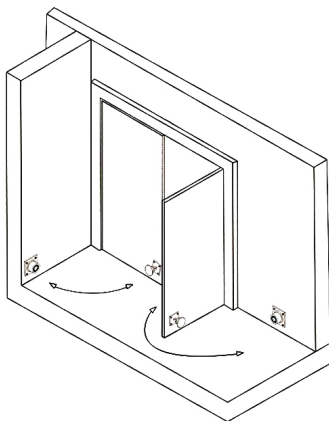

Dimensions

